



**HIGH PERFORMANCE
STAINLESS STEEL EXHAUSTS**

SCHEMA DI MONTAGGIO - ASSEMBLY SCHEDULE

COD. **58.0904.00**

REV. **00** DEL. **22/07/2021** TEC-LOG **G.D.**

Descrizione **Mini F56 Cooper S / JCW**

Fig. 1

-  Installare le 3 staffe in dotazione come in figura 1,2,3!
-  Install the 3 brackets as per picture no. 1,2,3.
-  Installer les 3 supports fournis comme sur les figures 1,2,3.
-  Instalar los 3 soportes de fijación como en las imagenes 1,2,3.
-  Die 3 mitgelieferten Halterungen installieren, wie Bild 1,2,3.

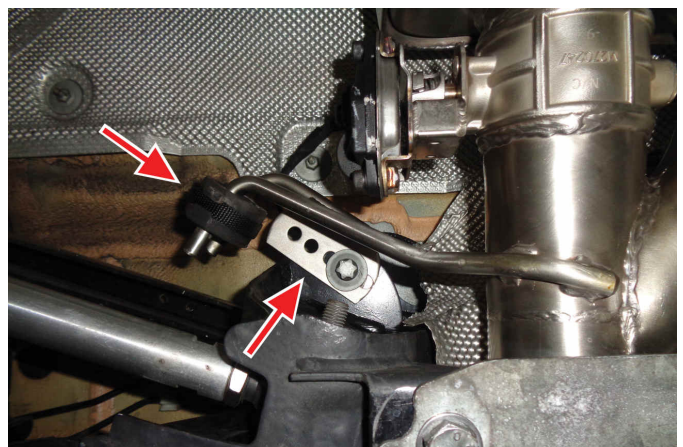


Fig. 2







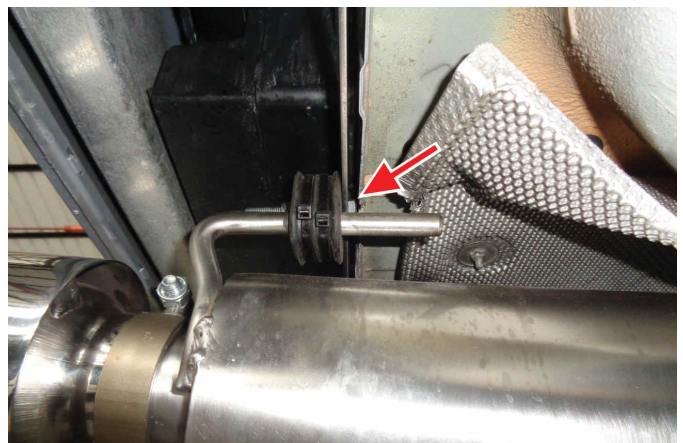


Fig. 3

-  Prima di montare la staffa lunga inserite le due viti per i gommini in dotazione.
-  Before mounting the long bracket, fix the 2 screws for the rubbers.
-  Avant de monter le long support il faut insérer les 2 vis des garnitures.
-  Antes de montar el soporte largo, coloque los tornillos para los trozos de goma en dotación.
-  Vor der Montage der Halterung setzen Sie die beiden Schrauben ein.

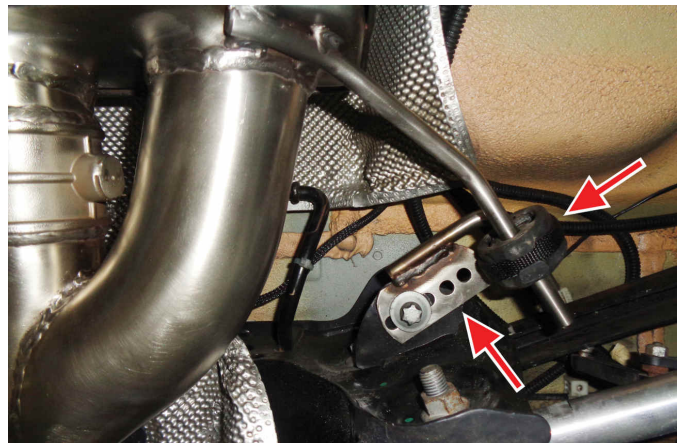



**HIGH PERFORMANCE
STAINLESS STEEL EXHAUSTS**

Fig. 3

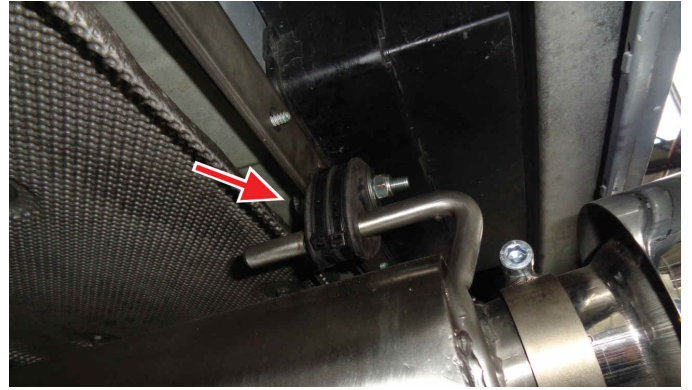


Fig. 3

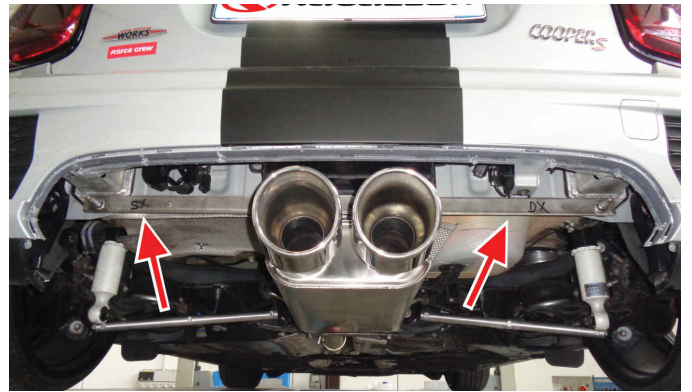


Fig. 3






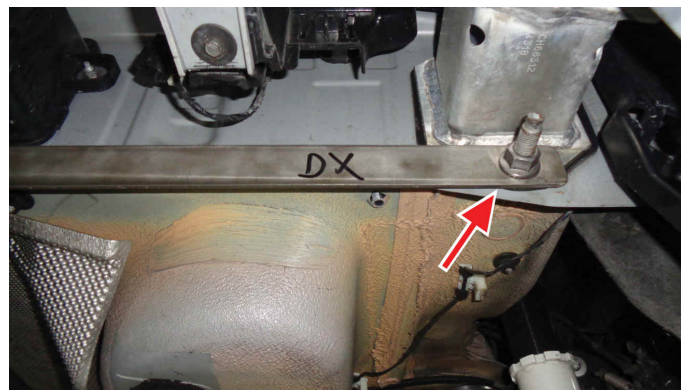
-  Stringere bene i dadi.
-  Tighten the nuts.
-  Serrer les écrous.
-  Apretar bien las tuercas.
-  Die Muttern anziehen.








Fig. 3





**HIGH PERFORMANCE
STAINLESS STEEL EXHAUSTS**

Fig. 4

-  Montare lo scarico completo.
-  Mount the exhaust.
-  Installer l'échappement.
-  Montar el escape completo.
-  Den Auspuff installieren.

